


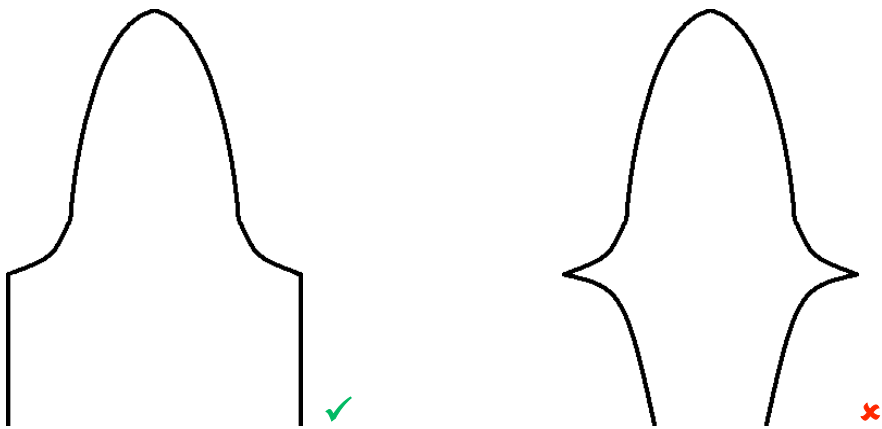

Instruction Sheet Copings, Bridges, Abutments

Following these recommendations when preparing copings, bridges and abutments for scanning will minimise errors in scanning and work towards ensuring that optimum results for your casework are achieved.

Step	Process
1.	Die hardener – do not use ✖
2.	Die spacer – do not use ✖
3.	Ditching the margin when preparing die – do not ditch the margin ✖ 
4.	It is highly recommended that the first scan of a bridge is made with a solid model with only the margins exposed. ✓ Once the first scan is complete then you can separate the die to scan the prepared teeth. ✓

IF YOU HAVE ANY QUERIES, PLEASE DO NOT HESITATE TO CONTACT STONEGLASS IN THE FIRST INSTANCE ON (+61 2) 9764 1036